


Owner's Manual

Exploded View

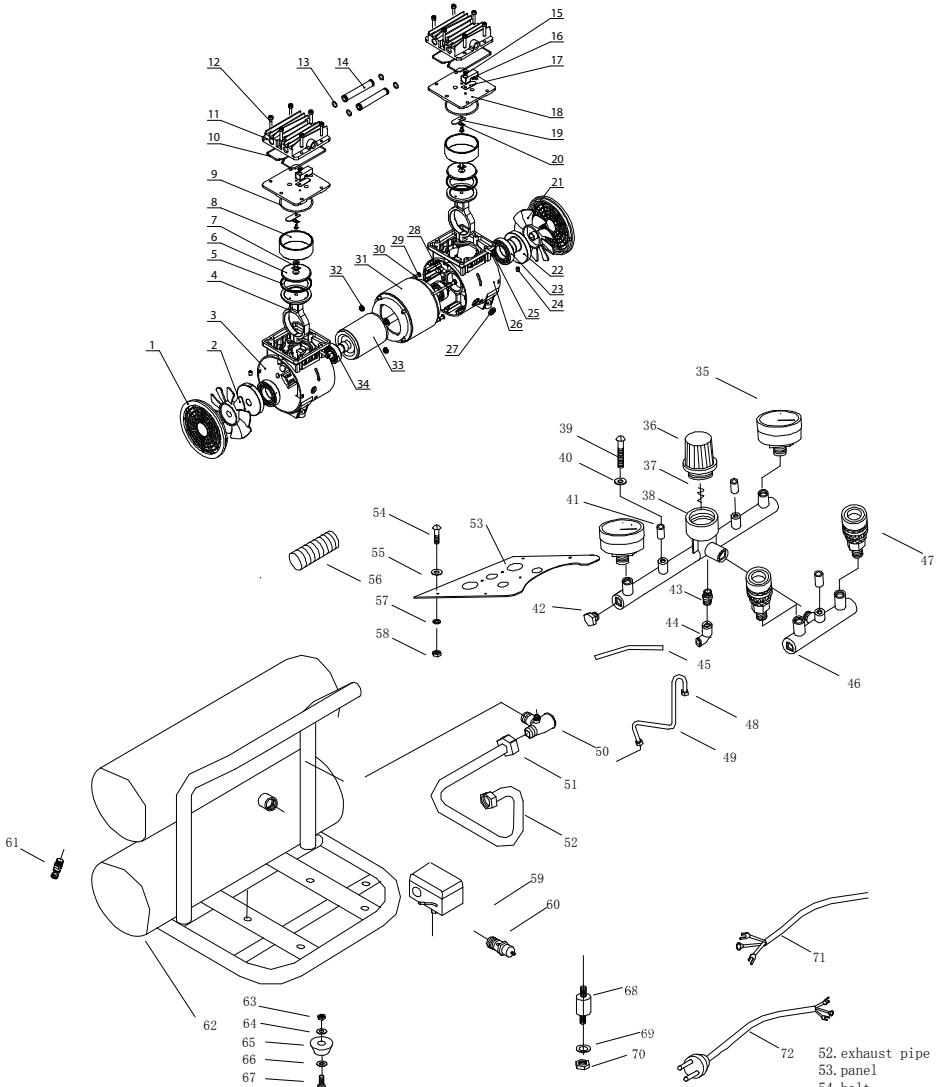

1. fan cowl
2. fan
3. case
4. connecting bar
5. piston cup
6. plate pinch
7. pressure plate screw
8. cylinder
9. cylinder obturating ring
10. cylinder head obturating ring
11. cylinder head
12. cylinder head screw
13. connecting hose obturating ring
14. connecting hose
15. pan head screw
16. limited block
17. gassing valve plate

18. valve plate
19. air inflow valve plate
20. metal strengthen sheet
21. fan
22. crank
23. bearing
24. holding screw
25. cheese head screw
26. case
27. leading-out line guard circle
- 28.
29. electrical motor bolt
30. grower washer
31. stator
32. lock nut
33. rotor
34. bearing

35. pressure gauge
36. regulator
37. spring
38. support I
39. bolt
40. washer
41. joint
42. bolt
43. connect
44. elbow exhaust
45. pipe
46. support II
47. quick connect
48. unloading nut
49. unloading pipe
50. check valve
51. exhaust nut

52. exhaust pipe
53. panel
54. bolt
55. washer
56. handle
57. spring
58. nut
59. pressure switch
60. safety valve
61. drain cook
62. tank
63. nut
64. washer
65. cushion foot
66. washer
67. bolt
68. foot
69. washer
70. nut
71. electrical wire
72. plug