

| NO. | APA PART NUMBER | Description |
|------------|------------------------|--|
| 1 | APG3006-01-GR | BOLT |
| 2 | APG3006-02-GR | SPRING WASHER |
| 3 | APG3006-03-GR | WASHER |
| 4 | APG3006-04-GR | COVER |
| 5 | APG3006-05-GR | BOLT |
| 6 | APG3006-06-GR | REAR COVER, MOTOR |
| 7 | APG3006-07-GR | STATOR |
| 8 | APG3006-08-GR | BOLT |
| 9 | APG3006-09-GR | ROTOR |
| 10 | APG3006-10-GR | BOLT |
| 11 | APG3006-11-GR | FUEL TANK |
| 12 | APG3006-12-GR | BACK SHROUD |
| 13 | APG3006-13-GR | FUEL CAP |
| 14 | APG3006-14-GR | MEETING SET |
| 15 | APG3006-15-GR | SPARK PLUG INSPECTING TOP |
| 16 | APG3006-16-GR | BOLT |
| 17 | APG3006-17-GR | WASHER |
| 18 | APG3006-18-GR | BOLT |
| 19 | APG3006-19-GR | MUFFLER GUIDED COVER(OUTSIDE) |
| 20 | APG3006-20-GR | SELF-TAPPING BOLT |
| 21 | APG3006-21-GR | ENGINE |
| 22 | APG3006-22-GR | CYLINDER HEAD GUIDED COVER(UP) |
| 23 | APG3006-23-GR | CYLINDER HEAD GUIDED COVER(DOWN) |
| 24 | APG3006-24-GR | AIR-CLEARNER ASSEMBLY |
| 25 | APG3006-25-GR | NUT |
| 26 | APG3006-26-GR | ENGINE MOUNT |
| 27 | APG3006-27-GR | WASHER |
| 28 | APG3006-28-GR | BOLT |
| 29 | APG3006-29-GR | OIL ALARMER |
| 30 | APG3006-30-GR | MUFFLER |
| 31 | APG3006-31-GR | MUFFLER GUIDED COVER(INSIDE) |
| 32 | APG3006-32-GR | OUT-FUEL PIPE |
| 33 | APG3006-33-GR | FUEL PETCOCK |
| 34 | APG3006-34-GR | SPRING WASHER |
| 35 | APG3006-35-GR | NUT |

| NO. | APA PART NUMBER | Description |
|------------|------------------------|-----------------------|
| 36 | APG3006-36-GR | IN-FUEL PIPE |
| 37 | APG3006-37-GR | MUFFLER EXHAUST COVER |
| 38 | APG3006-38-GR | BASE PLATE |
| 39 | APG3006-39-GR | VIBRATION RUBBER PAD |
| 40 | APG3006-40-GR | WASHER |
| 41 | APG3006-41-GR | BOLT |
| 42 | APG3006-42-GR | BOLT |
| 43 | APG3006-43-GR | CAPACITOR MOUNT |
| 44 | APG3006-44-GR | CAPACITOR |
| 45 | APG3006-45-GR | FORE SHROUD |
| 46 | APG3006-46-GR | NUT |
| 47 | APG3006-47-GR | OIL INSPECTING TOP |
| 48 | APG3006-48-GR | ENGINE SWITCH |
| 49 | APG3006-49-GR | AC OUTLET |
| 50 | APG3006-50-GR | PLOT LAMP |
| 51 | APG3006-51-GR | OIL WARNING LAMP |
| 52 | APG3006-52-GR | CONTROL PANEL |
| 53 | APG3006-53-GR | DC OUTLET |
| 54 | APG3006-54-GR | DC CIRCUIT BREAKER |
| 55 | APG3006-55-GR | AC CIRCUIT BREAKER |
| 56 | APG3006-56-GR | FORE COVER, MOTOR |
| 57 | APG3006-57-GR | WASHER |
| 58 | APG3006-58-GR | BOLT |
| 59 | APG3006-59-GR | WASHER |
| 60 | APG3006-60-GR | SPRING WASHER |
| 61 | APG3006-61-GR | NUT |
| 62 | APG3006-62-GR | BOLT |
| 63 | APG3006-63-GR | Spark plug |
| 64 | APG3006-64-GR | Recoil start ass. |

- The last two parts (Spark plug and Recoil start ass.) are not shown in the picture.
- All repairs and part replacement should be performed by a qualified technician or service center. Some parts may not be available as single replacement.