

## PART LIST

### PART LIST

Please check when unpacking the unit to be sure that all items listed below are included:

- |                      |                            |
|----------------------|----------------------------|
| 1. Main Unit         | 8. Lower Handle            |
| 2. Safety Switch     | 9. Nuts and Bolts X 8      |
| 3. Level Switch      | 10. Charging Adaptor       |
| 4. Battery Pack      | 11. Height Adjustment Knob |
| 5. Grass Catcher     | 12. Cable Clips X 3        |
| 6. Upper Handle      | 13. On/Off Switch          |
| 7. Middle Handle X 2 | 14. Reset Button           |

